 
 


Attached you will find 2 files, one is called VNC Viewer.

 
1. Extract the contents onto the desktop of your computer. You may already have VNC installed on the PC if you've replaced driver cards in the past. You will need to change the extension to .exe.
2. Extract the contents of the folder labeled Model 12000 onto your desktop and then onto a memory stick.
3. Remove the rear cover of the XL to expose the Mother Board "VIA" and Control Board.
4. Insert the memory stick into a free USB port located beneath the Mother Board "VIA".
5. Turn power on the XL.
6. Using VNC Viewer, add the correct IP Address for your XL as shown below.

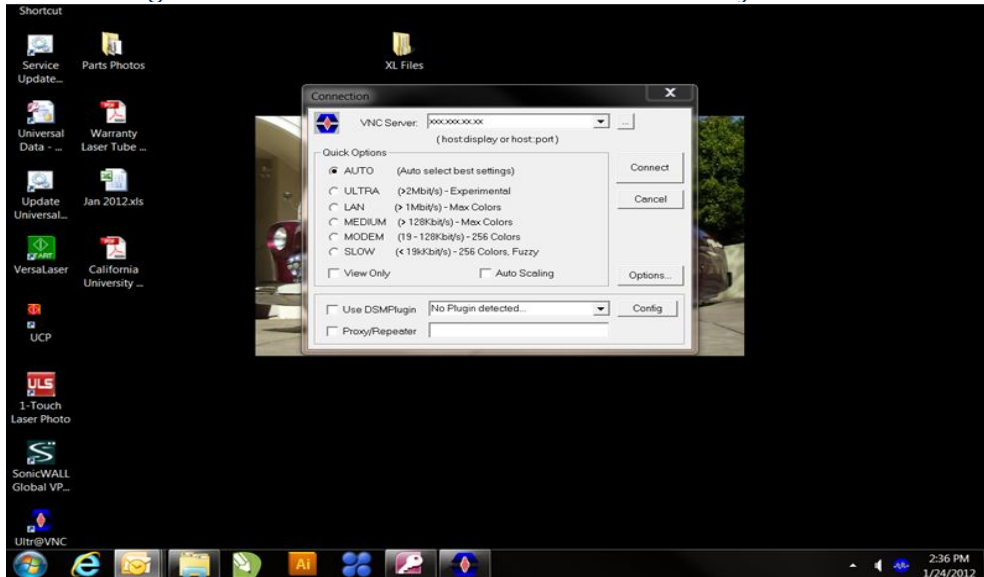

7. Next you'll be prompted for the password "ulsxl".
8. Once you're communicating with the XL thru VNC press the Q "Quit" on your keyboard. Doing so will turn the power off to the XL.
9. Open the file transfer from the VNC.

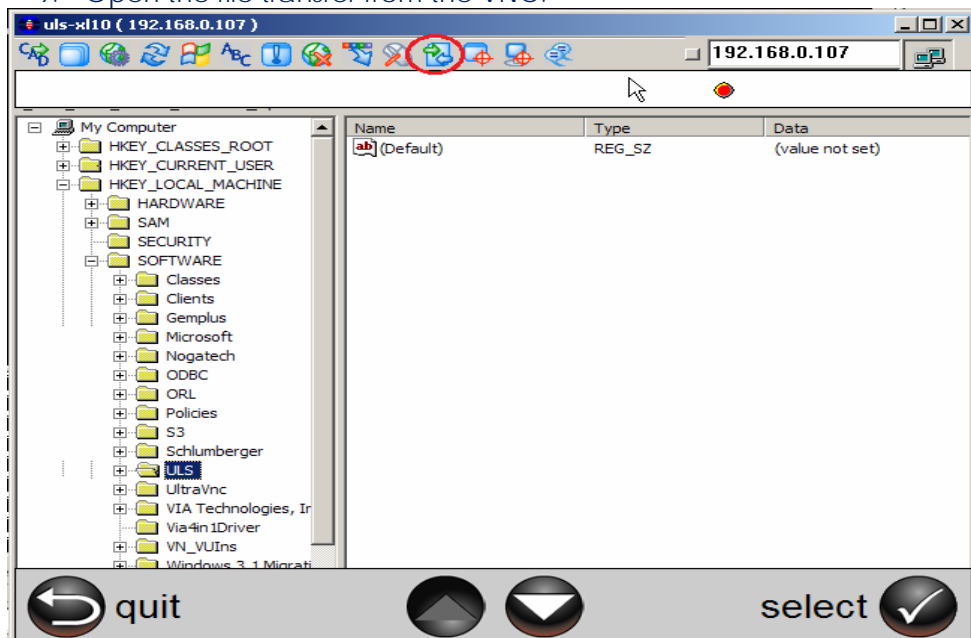

10. Find your memory stick on the “Remote Machine” side as shown below.

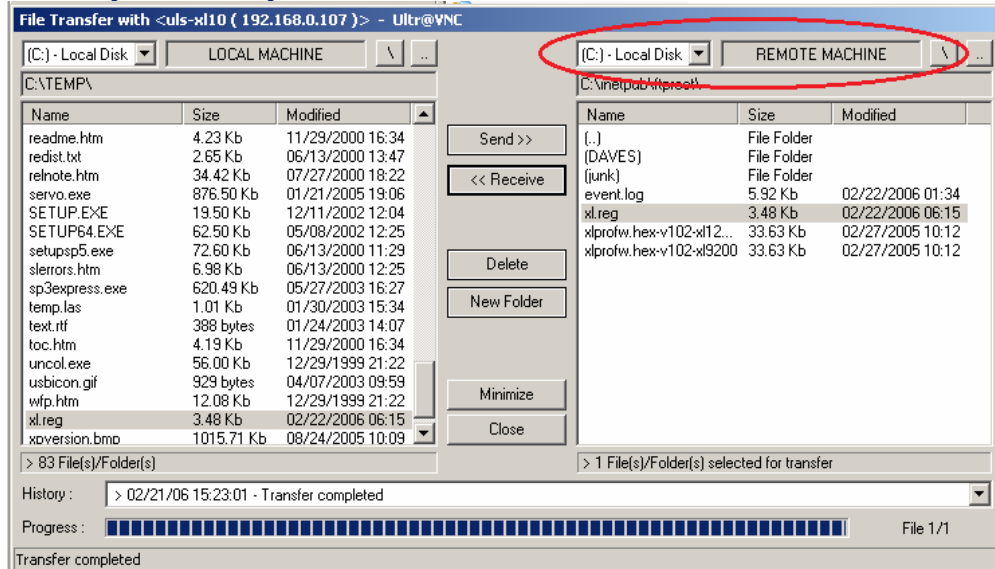

11. Double click on the “model12000.exe”.

12. Close the VNC, you are done.

13. Restart your system.